

## Front Seats

### ■ Adjusting seat position



- 1 Moves the seat forward
- 2 Moves the seat backward

The height of the driver's head restraint is automatically adjusted simultaneously with the seat position adjustment operation.

### ■ Adjusting seatback angle



- 1 Tilts the seatback forward
- 2 Reclines the seatback

### ■ Adjusting vertical height



- 1 Raises the height of the seat
- 2 Lowers the height of the seat

### ■ Adjusting the seat cushion length (driver's seat)



- 1 Lengthens the seat cushion
- 2 Shortens the seat cushion

## ■ Adjusting the seat cushion (front) angle



- 1 Raises the front of the cushion
- 2 Lowers the front of the cushion

## ■ Adjusting the lumbar support



### ► Driver's seat

- 1 Firmer
- 2 Softer
- 3 Up
- 4 Down

### ► Front passenger's seat

- 1 Firmer
- 2 Softer

## ■ Operating the front passenger's seat from driver's seat or rear seat


### ■ Operating the front passenger's seat from the driver's seat

#### ► Without rear console display



- 1 Tilts the seatback forward
- 2 Tilts the seatback backward
- 3 Moves the seat forward
- 4 Moves the seat backward

#### ► With rear console display

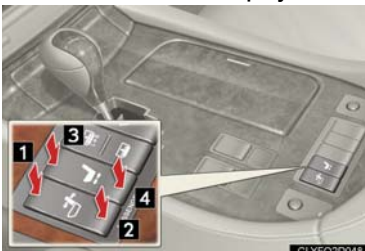

- 1 Tilts the seatback forward
- 2 Tilts the seatback backward
- 3 Moves the seat forward
- 4 Moves the seat backward


## ■ Operating the front passenger's seat (with relaxation seat)

### ► 5-seat models



- 1 Moves the front passenger's seat forward
- 2 Moves the front passenger's seat backward  
The seatback will return to the neutral position.

### ► 4-seat models

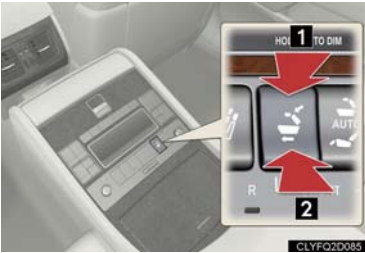

- 1 Moves the front passenger's seat forward
- 2 Moves the front passenger's seat backward  
The seatback will return to the neutral position.

The operation can be performed when the "POWER" switch is in ON mode.

## Power Rear Seat (If Equipped)

### ► 5-seat models without relaxation seat



1 Selecting the seat

2 Adjusting the seat position

3 Adjusting the seatback upper angle

4 Pelvic support seat controller

### ► 5-seat models with relaxation seat



1 Selecting the seat

2 Adjusting the seat position

3 Adjusting the seatback upper angle

4 Adjusting the seatback angle

5 Adjusting the ottoman angle

6 Rear seat relaxation system/pelvic support seat controller

## ► 4-seat models



- 1 Selecting the seat
- 2 Adjusting the seat position
- 3 Adjusting the seatback upper angle
- 4 Adjusting the seatback angle
- 5 Adjusting the ottoman angle
- 6 Rear seat relaxation system/pelvic support seat controller

## ■ Returning the rear seat from the front seats



To return the rear seat to the neutral position, press and hold the button.

## ■ Relaxation mode (relaxation seat)

### ► 5-seat models



**1** Moves the seats to the relaxation mode

**2** Returns the seats to the neutral position

The rear seatback, ottoman and the front passenger seat operate simultaneously.

The operation can be performed when the "POWER" switch is in ON mode.

### ► 4-seat models



**1** Moves the seats to the relaxation mode


**2** Returns the seats to the neutral position

The rear seatback, ottoman and the front passenger seat operate simultaneously.

The operation can be performed when the "POWER" switch is in ON mode.



When a rear door is opened, the seat on that side will automatically return to the neutral position.
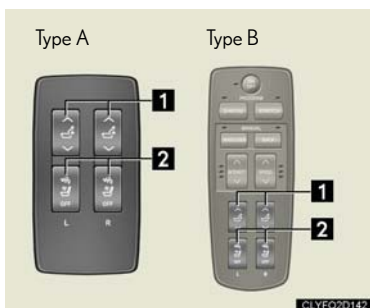
## ■ Pelvic support seat with seat vibrator




**1** Support plate position adjustment switch

**2** Vibration switch

Press  to operate the vibration function. Vibration will start in the same speed level as when previously operated. Each time  is pressed, the speed changes between 3 levels. Pressing “OFF” stops the vibration function.

Automatic stop function: Vibration will automatically stop approximately 15 minutes after starting.

## ■ Rear seat relaxation system (with relaxation seat)

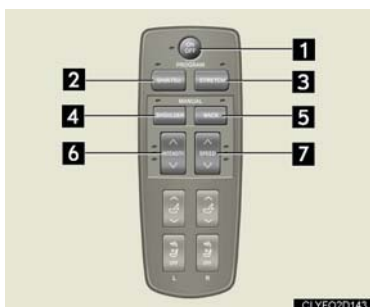

**1** Turns the system on and off

If no buttons are selected within approximately 3 minutes of operating this switch, the system will automatically turn off.

**2** Starts the “SHIATSU” program  
Partial pressure for the whole back

**3** Starts the “STRETCH” program  
Stretches and relaxes the lower back

**4** Starts operation for the upper back

**5** Starts operation for the lower back


**6** Adjusts the intensity of the air pressure  
3 intensity levels are available.

**7** Adjusts the speed of the air unit  
3 speed levels are available.

Automatic stop function: Each operation will automatically stop approximately 15 minutes after starting.

## Head Restraints


### Front seats

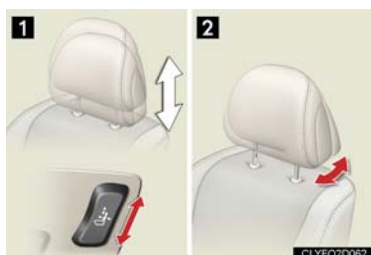

- 1 Vertical adjustment
- 2 Horizontal adjustment


### Outside rear seats

#### ► Power type

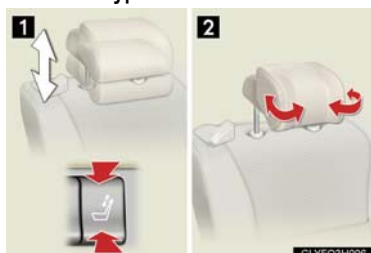


- 1 Vertical adjustment
- 2 Side support adjustment

#### ► Manual type

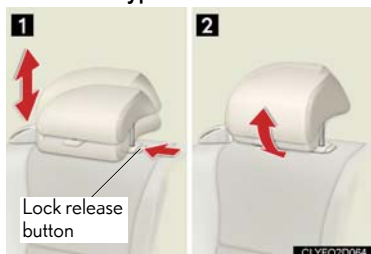

- 1 Vertical adjustment  
Pull the head restraints up when raising.  
Push and hold the lock release button when lowering.
- 2 Horizontal adjustment

### Rear center seat (5-seat models)

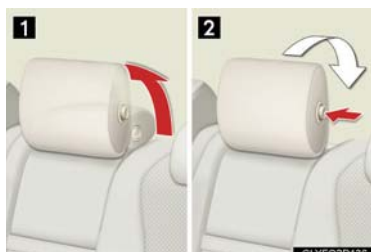


- 1 To use
- 2 To fold



## Seat Belts

### ■ Adjusting the seat belt shoulder anchor height (front seats)

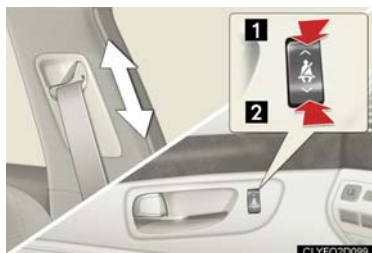

- 1 Up
- 2 Down

### ■ Seat belts comfort guides (outside rear seats)



If the shoulder belt sits close to the neck, slide the comfort guide forward.